



Cut cold main feed and supply to bottom connection of mains coil in top of cylinder
 Hot return is supplied to divert valve that allows water to bypass the boiler when solar tank is up to temp.
 The valve should be motor out motor in variety not spring return.

- A Non-return valve
- B Pressure Gauge
- C Fill loop
- D Expansion Vessel
- E Solar Pump